PIX-LINK

Quick Installation Guide




LED Explanation

LEDs	Name	Status	Indications
SYS	SYS LED	Solid	The device is on.
		Off	The device is off.
		Blinking	The device is in the pairing procedure.
	LAN LED	Solid	The Ethernet port is connected.
		Off	The Ethernet port isn't connected.
企	PLC LED	Solid	Device pairing succeeded
		Off	The device is not paired or malfunctioning
(in the second s	WIFI LED	Off	The wireless function has been disabled.
		Blinking	Wireless open

Button Explanation

PAIR/RST: When the button is pressed for 1-2 seconds, the device enters the pairing state. When the button is pressed for 5-8 seconds, the device releases the pairing state and the WiFi Repeater restore the factory settings. When the button is pressed for more than 10 seconds, the Powerlina Adapter restore the factory settings.

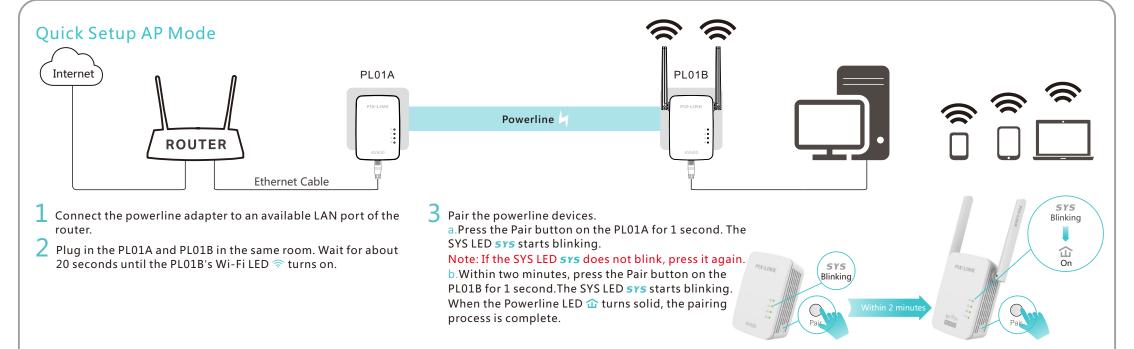

- 4 Configure the WiFi SSID(network name) and password.
 - a.Connect to the PL01B

For Wired

Disable the Wi-Fi on your computer. Connect your computer to the PLO1B via an Ethernet cable.



For Windows Users

Disconnect your Ethernet (wired) connection from your computer. Click the Wi-Fi icon on the taskbar and connect to the Repeater's network (e.g. WiFi-Repeater).



For Mac OS X Users

Disconnect the Ethernet (wired) connection from your computer (if any). Click the Wi-Fi icon in the top right corner of the screen, and connect to the Repeater's network (e.g. WiFi-Repeater).



b.Launch a web browser and type http://myrepeater.net or http://192.168.10.1 in the address field. Enter admin (all lowercase) for both Username and Password, then click Submit.



c. After logging in, you will see the web page below:
Click on "AP" to continue.






d. Change the SSID and Password, Click on "Apply" button, The WiFi Repeater will restart.

If the login window does not pop up, please refer to FAQ > Q1

Wireless AP Mode		SSID	SSID of the WiFi Extender	
		WiFi-Repeater	Channel	Auto (recommend)
	Security key	Auro • WPA PSK • Unmesk	Security type	Setup the wireless security and encryption prevent from unauthorized access and monitoring. Supports WEP, WPA, WPA2, WPA/WPA2 encryption methods.
		Apply Cancel	Security Key	The "password" of the WiFi Extender

 $\underline{e}. After the \, PLO1B \, reboot \, has \, been \, completed, \, You \, can \, Surf \, the \, Internet \, with \, the \, Powerline \, devices.$

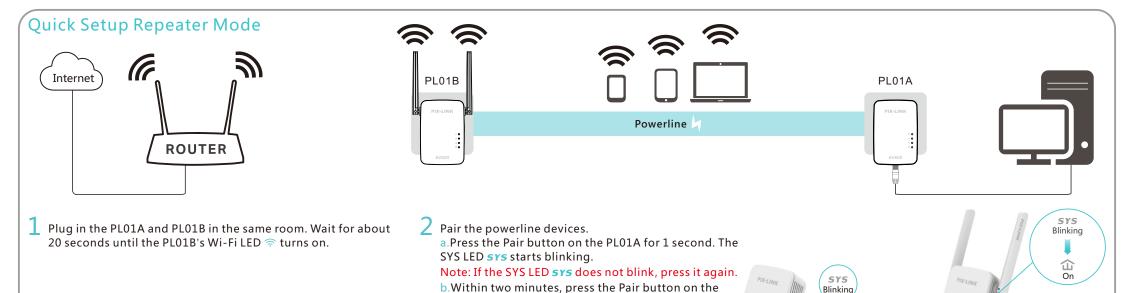

PLO1B for 1 second. The SYS LED **5YS** starts blinking. When the Powerline LED 🏠 turns solid, the pairing

process is complete.

Configure the WiFi SSID(network name) and password.

a. Connect to the PL01B

Disable the Wi-Fi on your computer. Connect your computer to the Repeater via an Ethernet cable.



For Windows Users

Disconnect your Ethernet (wired) connection from your computer. Click the Wi-Fi icon on the taskbar and connect to the Repeater's network (e.g. WiFi-Repeater).



For Mac OS X Users

Disconnect the Ethernet (wired) connection from your computer (if any). Click the Wi-Fi icon in the top right corner of the screen, and connect to the Repeater's network (e.g. WiFi-Repeater).



b. Launch a web browser and type http://myrepeater.net or http://192.168.10.1 in the address field. Enter admin (all lowercase) for both Username and Password, then click Submit.



c. After logging in, you will see the web page Click on "Repeater" to continue.



d.Select your Wireless router's Network, Either keep the default SSID or customize it for extended network and insert the key of your network.

If the login

refer to FAQ > Q1



Note: The default Repeater ssid is set to be xxx ext(xxx indicates host Router's SSID) and the Security Key is the same as your host

Click on "Apply" button, The Wi-Fi Repeater will restart. After the reboot has been completed, the Wi-Fi Repeater is accessible under the SSID and the Wireless key.

TIP

If there is no internet connection when the Powerline Adapter configuration is complete. Please disconnect the Ethernet (wired) connection from your computer to the Powerline Adapter, then reconnect the Ethernet (wired) connection from your computer to the Powerline Adapter or reconnect the WiFi of the Repeater.

Attention

Plug powerline devices into wall outlets. Do not use power strips after setup.







Frequently Asked Questions

Q1. Why doesn't the login page appear after entering http://myrepeater.net?

- If your computer is wirelessly connected, please verify that you have connected to the Repeater's SSID.
- If your computer is connected via an Ethernet cable, please verify that the connection is stable.
- Make sure your computer is set to obtain an IP address automatically.
- Use the IP address to log in to the page. The default IP is 192.168.1.254. If the Repeater is connected
- to the host router, please go to the router's DHCP client list to obtain the Repeater's current IP address.
- Please reset the Repeater and try again.

Q2. How do I reset my Powerline Adapter to factory default settings?

With the Powerline Adapter plugged into an electrical outlet, press and hold the Reset button 8 second, the SYS LED will turn off, When the LEDs turn back on, the reset process is complete.

Q3. What should I do if there is no internet connection in my powerline network?

- Make sure all powerline adapters and extenders are on the same electrical circuit.
- Make sure the Powerline LEDs are lit on all of your powerline devices. If they are not, pair all devices again.
- Make sure all devices are correctly and securely connected.
- Check if you have an internet connection by connecting the computer directly to the modem or router.

Q4. What should I do if a successfully-paired Repeater does not reconnect after it is relocated?

- Make sure all powerline adapters and extenders are on the same electrical circuit.
- Try to pair the Repeater again, and make sure the Powerline LED is on.
- Check for possible interference due to a washing machine, air conditioner or other household appliance that may be too close to one of the powerline devices. Plug the appliance into the integrated

electrical socket to remove the electrical noise if your powerline device has an integrated electrical socket.